 


Quick start Guide

VoCoVo Go



VoCoVo

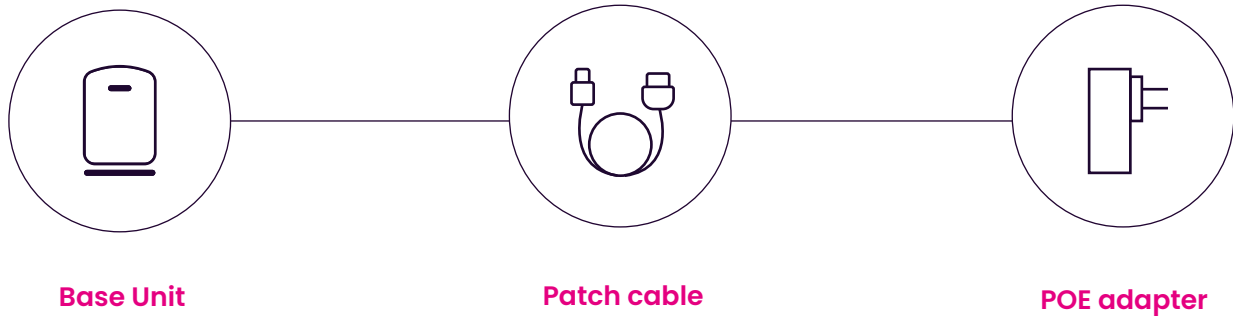

Place the VoCoVo Base Unit in a central position to maximise signal strength in the area of use. A high location offers best signal strength. A quick walkaround test with users talking via the VoCoVo headsets will give you a very good idea of the signal boundaries.

Use the supplied 1.5m patch cable to connect the Base Unit to the port labelled “POE” on the included power supply. (The Base Unit can be connected using a patch cable with a length of up to 100m (not included)). Next plug the power supply in.

The VoCoVo Go Base Unit will now start up – this can take up to 40 seconds. The Unit indicates its status using an LED on the front of the unit. A green LED indicates that the system is operating as normal, an orange LED is shown during startup or when there is a fault. Please contact our Aftersales Support Team, using the contact details below for any faults.

1. Battery Charging

1.1 VoCoVo Headset charging

Place your Headset on charge at the end of each day.

When a Headset battery is charging, the white LED remains on solidly, once charged, it will flash every 5 seconds.

1.2 Battery charge time

20% charge in less than 20 minutes.

50% charge in less than 45 minutes.

Full charge in less than 3 hours.

1.3 VoCoVo Headset charging

Always use the supplied VoCoVo charge-rack and the correct power supply when charging your VoCoVo devices. Using an incorrect charger or power supply may cause damage to the equipment.

If the VoCoVo Headset is to remain unused for a prolonged period, it is best to turn it off.

Turn off by pressing the volume up, volume down and the menu button together for 2 seconds, the white LED will blink and then go out. The VocoVoice headset must be recharged every 6 months if not being used, even when switched off.

2. Usage and features

2.1 Wearing styles and comfort

Move the VoCoVo Headset regularly, and swap ears if possible. Any discomfort is usually due to sensitive pressure points on your head, move or adjust it for your comfort.



3. Handset usage and features

Press the conference button to join the existing VoCoVo conference. The VocoPhone will display "Conference Listening" on the screen. You will now be able to hear the other users of the conference.

Like the Headset, the Handset is Push to Talk.

To enable Talk-Lock press the Talk button, then press the Talk-Lock button to enable Talk-Lock.

Loudspeaker can be enabled once in Conference Listening Mode. Simply press the loudspeaker button.

4.1 Push to talk button (PTT)

Press and hold the PTT Button, (you will hear a beep) – your voice will be heard on all the active VoCoVo Headsets.

Release the PTT Button when you have finished speaking.

4.2 Speaker volume buttons

Pressing the volume control buttons (+ and – buttons) will increase or decrease the VocoVoice headset speaker volume.

You will hear a high pitched beep tone when you reach maximum volume.

4.3 Mute function

Press and hold either volume button to activate mute mode.

Press the PTT button to deactivate mute mode.

4.4 LED indicator

The white LED indicator indicates the Headsets status.

Off indicates that the VocoVoice headset is not active.

One blink every two seconds indicates the Headset is active.

 
Rapid flashing Indicates the VoCoVo Headset is in registration

4.5 Talk-lock function


The Headset has a Talk-Lock function to allow you to talk to colleagues without holding down the PTT button.

Activated by holding down the PTT button and the menu button at the same time.

The Headset will stay in Talk-Lock mode for 3 minutes before returning to Push-To-Talk mode, or press PTT to exit Talk-Lock.

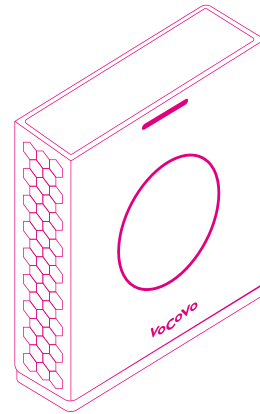

Base Unit

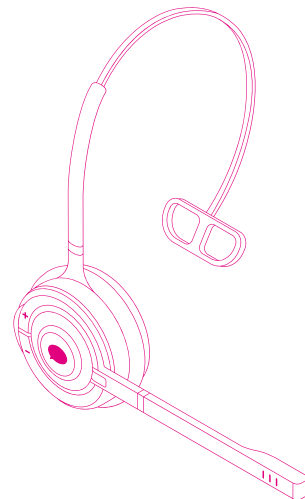 

Headsets



Handsets